



Auxiliary Cooling Fan

INSTRUCTIONS • #004-693 / #004-693-230

FIG.1



FIG.2

Position the fan so the switch is at the top and facing outward.



FIG.3



FIG.4



FIG.5



FIG.6

Position the fan so the direction of the air flow is directed at the compressor head.



GLEND0 LLC

900 Overlander Road • Emporia, KS 66801 USA
800-835-3519 • 620-343-1084 • Fax 620-343-9640
hello@grs.com • www.grs.com

Last Updated:08/22/2023

LIT-086