

PRIOR TO ANY SERVICE OR REPAIR FOLLOW THESE STEPS:

- 1. Power off machine by pressing power on/off button
- 2. Disconnect machine from power at the 24-volt power receptacle.
- 3. Turn off air compressor and shut off air supply at compressor.

- 4. Bleed residual air from system by depressing foot throttle.
- 5. Detach air hose from air supply input push-to-connect fitting

SERVICE & REPAIR

Please call GRS® or an authorized GRS® dealer to order replacement parts and for instructions on replacement. Do not attempt to service parts that must be sent to GRS® or an authorized GRS® dealer; these must be repaired or replaced by

GRS® or an authorized GRS® dealer. Servicing parts not signified as operator serviceable will void the 2-year warranty. Any part not noted as replaceable or serviceable by the operator must be sent in to GRS® or an authorized GRS® dealer for repair.

ORDER REPAIR OR REPLACEMENT PARTS

These parts are replaceable by the operator. Normal Wear and Tear, Abuse, Misuse, or Loss are not covered by warranty. See illustrations on page 2.

FOOT THROTTLE	044-525	FILTER MOUNT BRACKET	. 044-414
POWER CORD	022-993 / 022-994(EU)	SCREW	024-636
POWER SUPPLY	022-987	SCREW	024-637
AIR FILTER	022-944	FOOT THROTTLE HOSE	. 004-050
FITTING	022-230	FITTING	. 002-361

OPERATOR SERVICEABLE PARTS


Call GRS® or an authorized GRS® dealer for instructions and ordering information before attempting to service or replace these parts.

GraverSmith® ENCLOSUREpage 3 Motor Assembly (not Motor Valve Assembly).....page 6

Important notes are highlighted in yellow or marked in red.

800-835-3519

ACCESSORIES

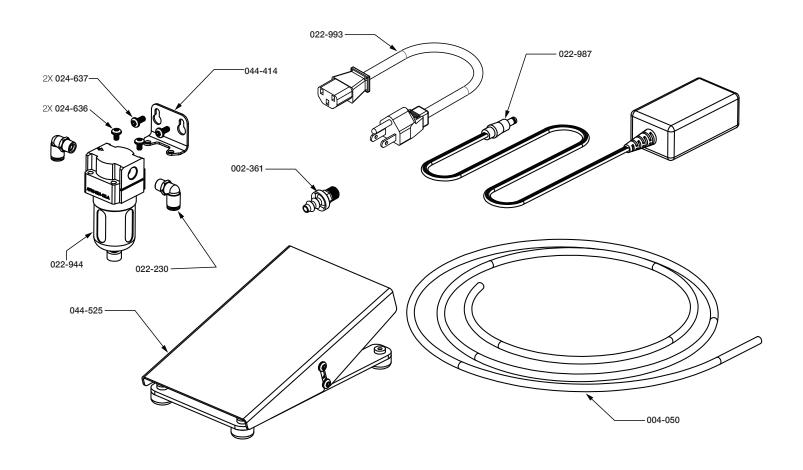

PART NO. QTY. DESCRIPTION

002-361 1 FITTING

NOT AVAILABLE IN EU AIR SYSTEMS

004-050 1 FOOT THROTTLE HOSE

022-230 2 FITTING

024-205 FITTING FOR EU AIR SYSTEM

 022-944
 1
 AIR FILTER

 022-987
 1
 POWER SUPPLY

 022-993
 1
 POWER CORD


022-994 FOR EU AIR SYSTEM

024-636 2 SCREW 024-637 2 SCREW

044-414 1 FILTER MOUNT BRACKET

044-525 1 FOOT THROTTLE

ENCLOSURE

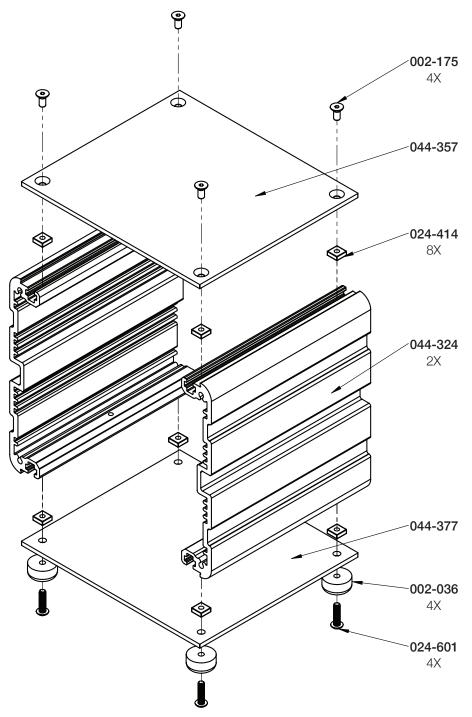

PART NO. QTY. DESCRIPTION

002-036 4 RUBBER MOUNTING FOOT

002-175 4 SCREW 024-414 8 NUT 024-601 4 SCREW 044-324 2 SIDE PANEL


044-357 1 TOP COVER PANEL

044-357-EU TOP COVER PANEL FOR EU AIR SYSTEM

044-377 1 BOTTOM COVER PANEL

Contact GRS[®] or an authorized GRS[®] dealer for replacement parts or repairs. Visit GRS[®] com/dealers for dealers in your country. 800-835-3519

FRONT FACE PLATE & MOTOR VALVE

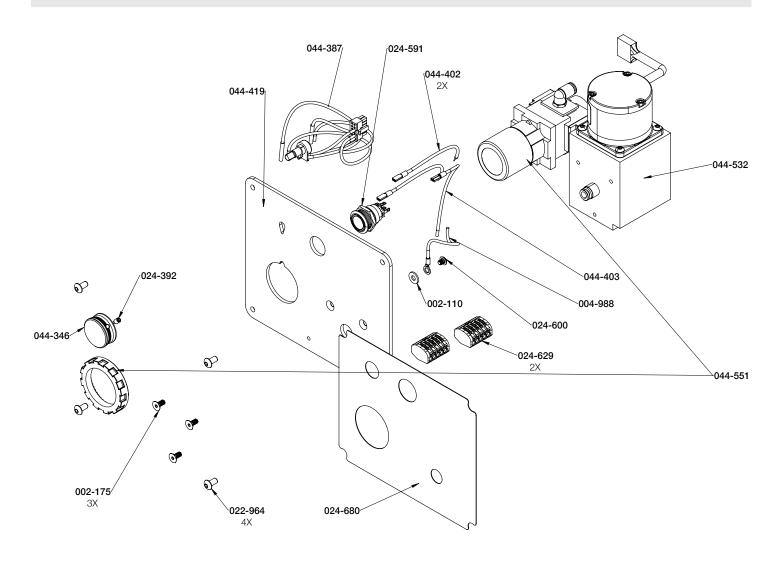


FAN	I NO.	QII.	DESCRIP	IION

002-110	1	WASHER
002-175	3	SCREW
004-988	1	BLACK WIRE ASSEMBLY
022-964	4	SCREW
024-392	1	SET SCREW
024-591	1	POWER SWITCH
024-600	1	SCREW
024-629	2	SPLICE
024-680	1	DECAL
044-346	1	SPEED CONTROL KNOB
044-387	1	WIRE
044-402	2	RED WIRE ASSEMBLY
044-403	1	BLACK WIRE ASSEMBLY
044-419	1	FRONT PANEL
044-532	1	MOTOR VALVE ASSEMBLY
044-551	1	PRESSURE REGULATOR & KNOB

Contact GRS® or an authorized GRS® dealer for replacement parts or repairs. Visit GRS®.com/dealers for dealers in your country.


REAR PLATE ASSEMBLY

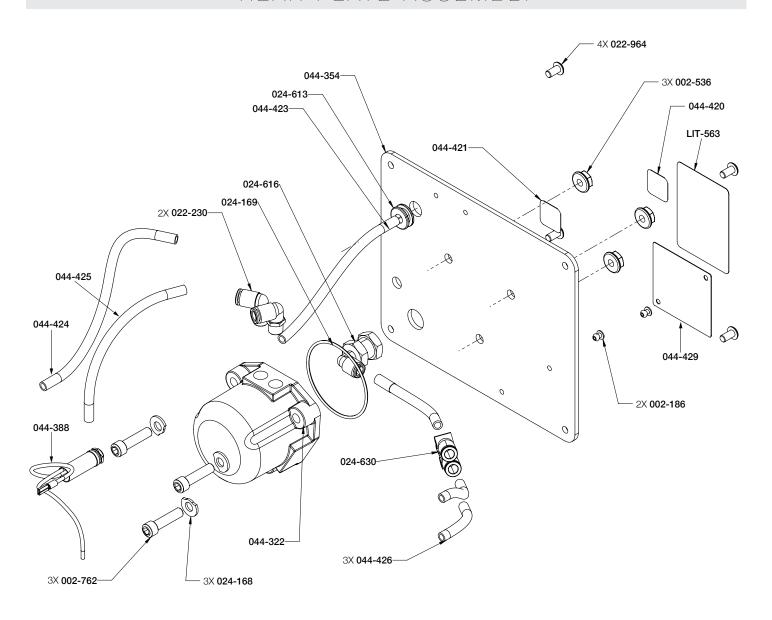

PART NO.	QTY	DESCRIPTION	PART	NO	. QTY	DESCRIPTION
002-186	2	RIVET	044-3	54	1	REAR PANEL
002-536	3	NUT	044-3	88	1	POWER JACK HARNESS
002-762	3	SCREW	044-4	20	1	DECAL, AIR INPUT
022-230	2	FITTING	044-4	21	1	DECAL, THROTTLE
022-964	4	SCREW	044-4	23	1	TUBING
024-168	3	WASHER	044-4	24	1	TUBING
024-169	1	O-RING	044-4	25	1	TUBING
024-613	1	GROMMET	044-4	26	3	TUBING
024-616	1	BULKHEAD ELBOW	044-4	29	1	SERIAL PLATE
024-630	1	Y UNION	044-42	044-429-EU FOR EU AIR SYSTEM		
044-322	1	AIR TANK	LIT-56	3	1	DECAL, DRY AIR NOTICE

Contact GRS[®] or an authorized GRS[®] dealer for replacement parts or repairs. Visit GRS[®].com/dealers for dealers in your country. 800-835-3519


MOTOR ASSEMBLY

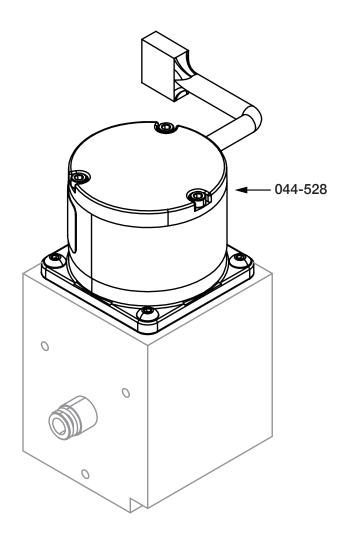


044-528 Motor Assembly

The Motor Assembly is operator replaceable. Contact GRS® or an authorized GRS® dealer for details.

WIRING DIAGRAM

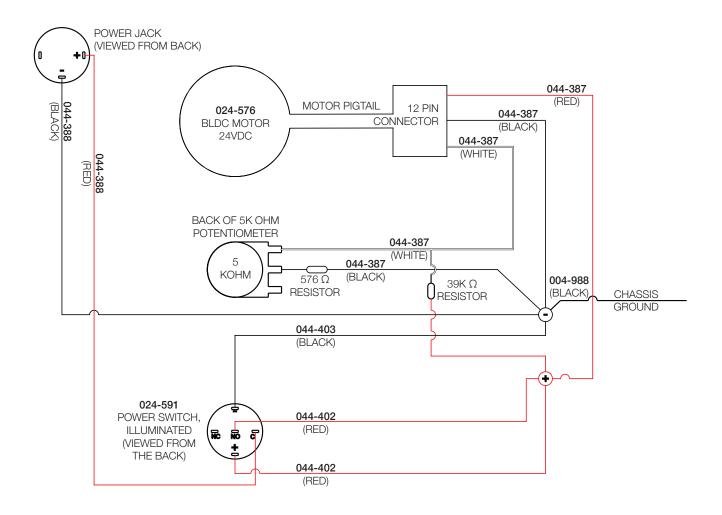

HOSE DIAGRAM

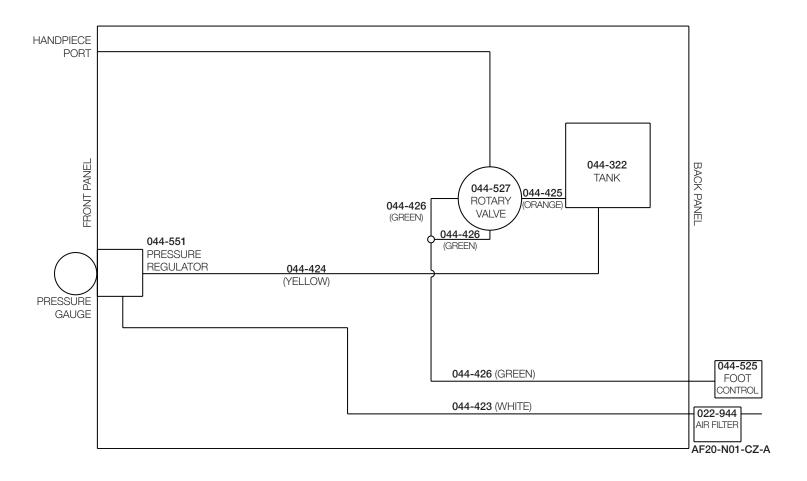

WARRANTY

Each GraverSmith®, including provided foot throttle, carries a full 2-year warranty covering parts and labor. Contact GRS® or an authorized GRS® dealer before returning any equipment.



These products are designed for reliable operation using most sources of compressed air. However, some air supplies contain excessive water, oil, dirt, rust, or other contaminants. The built-in filter of the engraving system is a final filter to protect against normal dirt and water. If the compressed air has excessive contaminants, install the necessary filter(s) and water trap(s) ahead of the engraving system.



Oil contamination can be gradual and subtle. If an oil residue (usually yellow or brown, sticky or liquid) becomes present in the filter bowl of the engraving system, or in the handpiece / throttle hose, the compressed air most likely contains oil or contaminants. Older oil lubricated and "silent" compressors that use internal oil are more likely to cause oil contamination. If this occurs, install a Coalescing Oil Filter (GRS® #004-730-6MM or equivalent).

NOTE: Damage caused by contaminated compressed air is not covered by the warranty.



Glendo LLC

900 Overlander Road Emporia, KS 66801 USA

Phone: +1-620-343-1084 Fax: +1-620-343-9640 E-mail: glendo@glendo.com

grs.com

LIT-581-EU GraverSmith-PartsList

GRS®, GraverMach® AT, GraverMach®, GraverMax® G8, GraverMax®, GraverMate®, GraverSmith®, BenchMate®, GraverMeister®, MicroBlock®, Airtact®, BenchMate Encore®, Acrobat®, Thermo-Loc®, GRS Apex®, MicroBlock®, Satellite®, 901®, C-Max®, GlenSteel®, Magnum®, GraverHone® VS, and Optia® are trademarks of Glendo LLC. Covered by USA and foreign patents. Printed in USA. Products made in USA.

© 2009-2024 Glendo LLC. All rights reserved.