




GRAVERHONE® ONE


QUICK-START GUIDE • #006-200

SETUP


ATTACH DRIVE PLATE

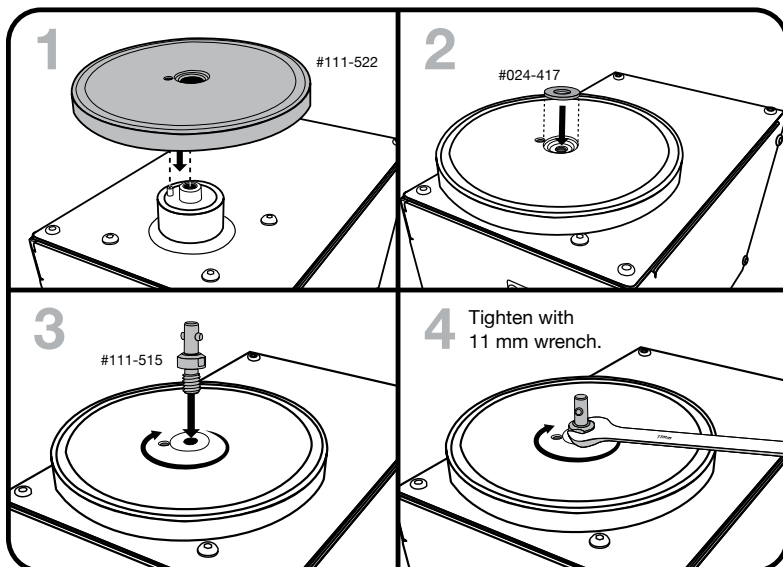

ATTACH SHARPENING WHEEL

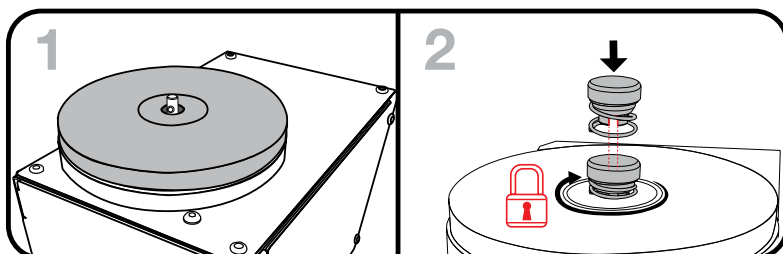


CONNECT ELECTRICAL POWER

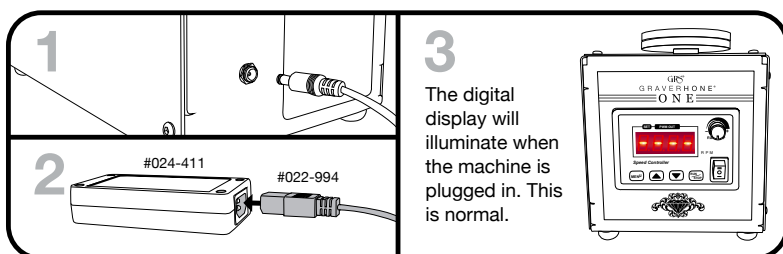

OPERATION

RUN/STOP SHARPENING SYSTEM


1

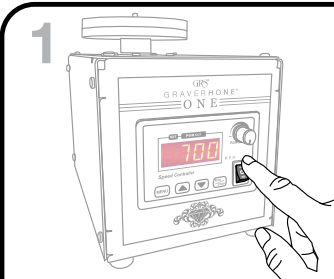


RPM


RUN STOP

Set rocker switch to

Forward rotation switch position 

OR

Reverse rotation switch position 

 Once started, the motor can be stopped with the rocker switch by placing it in the middle position. If the motor is stopped with the rocker switch, it will restart with the rocker switch.


2

Press the RPM Dial

OR


the RUN/STOP button


to start and stop the GraverHone® One.

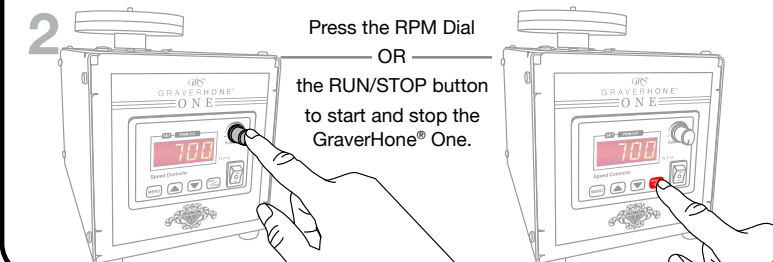

SET SPEED (ROTATIONS PER MINUTE)

1

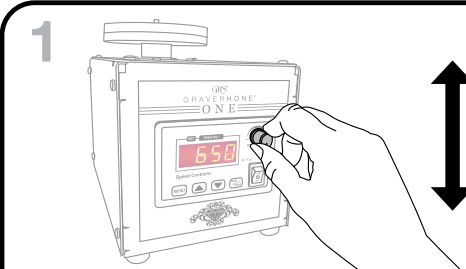




Turn the RPM dial

OR

press the green up and down arrow buttons to increase and decrease speed.

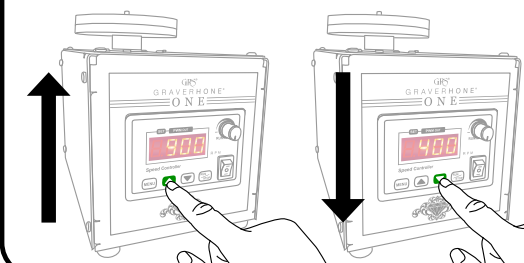

It is not advised to run abrasive wheels above 900 RPM due to accelerated wear, heat buildup, and rapid material removal from the graver being sharpened.



900 Overlander Road • P.O. Box 1153
Emporia, KS 66801 USA
800-835-3519 • 620-343-1084 • Fax: 620-343-9640
hello@grs.com • grs.com

LIT-588

Last Update: 2025-06-10